


# *User's Manual*

## DIGITAL AUDIO MATRIX PROCESSOR MATRIX A12

---



## Important Safety Instructions



This symbol, wherever used, alerts you to the presence of un-insulated and dangerous voltages within the product enclosure. These are voltages that may be sufficient to constitute the risk of electric shock or death.



This symbol, wherever used, alerts you to important operating and maintenance instructions.

Please read.



Alternating current/voltage (for adapter).

**ON:** Denotes the product is turned on.

**OFF:** Denotes the product is turned off.

### WARNING

Describes precautions that should be observed to prevent the possibility of death or injury to the user.



### CAUTION

Describes precautions that should be observed to prevent damage to the product. Disposing of this product should not be placed in municipal waste but rather in a separate collection.

### WARNING

#### Power Supply

Ensure that the in-source voltage (AC outlet) matches the voltage rating of the product. Failure to do so could result in damage to the product and possibly the user. Unplug the product before electrical storms occur and when unused for long periods of time to reduce the risk of electric shock or fire.

#### External Connection

Always use proper ready-made insulated mains cabling (power cord). Failure to do so could result in shock/death or fire. If in doubt, seek advice from a registered electrician.

#### Do Not Remove Any Covers

Within the product are areas where high voltages may be present. To reduce the risk of electric shock do not remove any covers unless the AC mains power cord is removed. Covers should be removed by qualified service personnel only.

No user serviceable parts inside.

#### Fuse (for adapter).

To prevent fire and damage to the product, use only the recommended fuse type as indicated in this manual. Do not short-circuit the fuse holder. Before replacing the fuse, make sure that the product is OFF and disconnected from the AC outlet.

#### Operating Conditions

Always install in accordance with the manufacturer's instructions. To avoid the risk of electric shock and damage, do not subject this product to any liquid/rain or moisture. Do not use this product when in close proximity to water. Do not install this product near any direct heat source. Do not block areas of ventilation. Failure to do so could result in fire. Keep product away from naked flames.

#### IMPORTANT SAFETY INSTRUCTIONS

Read these instructions  
Follow all instructions  
Keep these instructions. Do not discard.  
Heed all warnings.  
Only use attachments/accessories specified by the manufacturer.

#### Cleaning

When required, either blow off dust from the product or use a dry cloth. Do not use any solvents such as Benzol or Alcohol. For safety, keep product clean and free from dust.

#### Servicing

Refer all servicing to qualified service personnel only. Do not perform any servicing other than those instructions contained within the User's Manual.

#### PORTABLE CART WARNING



Carts and stands - The component should be used only with a cart or stand that is recommended by the manufacturer. A component and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the component and cart combination to overturn.

## Specifications

Analog I/O	12 Input / 8 Output
Connectors	Euro-block 3*12-Pin,5.00mm pitch for MIC input (balanced) Euro-block 3*8-Pin,5.00mm pitch for output (balanced)
Input Impedances	6.8Kohm
Phantom Power(+/-3V)	+48VDC
Frequency Response	20Hz~20KHz at 0dBu ±1.5dB A-weight
Distortion(THD&N)	<0.03%, typ 20Hz-20KHz, 0dBu A-weight
Maximum Input Level	+20dB
Digital Gain range	0 ~ -48dB steps=12dB
Dynamic Range	108dB
Crosstalk	<-88dB, at 20Hz-20KHz, 0dB, CH to CH
Output Impedances	240ohm
Frequency Response	20Hz~20KHz at 0dBu ±1.5dB
Maximum output Level	+20dB
S/N	-108dB A-weight
Crosstalk	<-88dB, at 20Hz-20KHz, 0dB, CH to CH
Indicators	Green(SIG)/Red(CLIP)
Display	128*64 dot OLED
Control	PC software
LAN Port	1*RJ-45
Remote Device Port	2*2 RJ-45
	supportRPM devices
	supportRVC devices
Option card (Digital Audio I/F)	Ulti-mod 8in/8out(Optional)
Reserve additional interface	1*2 RS232 1*4 GPIO input 1*2 RELAY output
DSP Processor	SHARC ADSP-21489, 450MHz
Word Length	32/64-bit Floating Point
CODEC	PCM1840 Quad 32-bit,48K/96K A/D PCM1690 Quad 32-bit,48K/96K D/A
S/W support	EXPANDER/GATE/RELAY/EQ/DELAY/COMPRESSOR SELECTION/GAIN/LEVEL SETTING DYNAMIC LEVEL CONTROL /MUTE ANC/AGC/FBC/Auto mixer/Matrix/Ducker
Power Supply	100-240VAC~ 50/60Hz Fuse T1.6AL
Power consumption	27W(Type)
Dimensions (L*H*D)	483*44*256mm

# 7 Appendix

## RS232 Codes

NO	Start Byte0 (1 Byte)	Start Byte1 (1 Byte)	Start Byte2 (1 Byte)	Length (2 Byte)	Device (2 Byte)	ID Address (High Byte)	ID Address (Low Byte)	Type (2 Byte)	Command (2 Byte)	Channel (1 Byte)	Local Channel : 0x01 - 0x0C (n Byte)	Value (n Byte)	End Byte (1 Byte)	Function
1	0x01	0x20	0x03	0x00 0x11	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x01	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	Fader Gain High Byte: 0x00 ( 1 Byte ) Fader Gain Low Byte: 0x00-0x0E ( 1 Byte )	0x40	Input Gain
2	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x02	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	Phase : 0x00 - Normal 1 , 0x01-Invert ( 1 Byte )	0x40	Input Phase
3	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x03	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	Mute : 0x00-On , 0x01-Off ( 1 Byte )	0x40	Input Mute
4	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x04	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Get Input Status
5	0x01	0x20	0x03	0x00 0x15	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x04	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	DC48V : 0x00-Off , 0x01-On ( 1 Byte ) MIC GAIN : 0x00-0x04 ( 1 Byte ) Digital Gain High Byte: 0x00 ( 1 Byte ) Digital Gain Low Byte: 0x00-0x0E ( 1 Byte ) Fader Gain High Byte: 0x00 ( 1 Byte ) Fader Gain Low Byte: 0x00-0x0E ( 1 Byte ) Mute : 0x00-On , 0x01-Off ( 1 Byte ) Phase : 0x00 - Normal, 0x01-Invert ( 1 Byte )	0x40	Receive Input Status
6	0x01	0x20	0x03	0x00 0x11	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x05	0x00	Channel 1-8 : 0x01-0x08 ( 1 Byte )	Fader Gain High Byte: 0x00 ( 1 Byte ) Fader Gain Low Byte: 0x00-0x0E ( 1 Byte )	0x40	Output Gain
7	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x06	0x00	Channel 1-8 : 0x01-0x08 ( 1 Byte )	Phase : 0x00 - Normal 1 , 0x01-Invert ( 1 Byte )	0x40	Output Phase
8	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x07	0x00	Channel 1-8 : 0x01-0x08 ( 1 Byte )	Mute : 0x00-On , 0x01-Off ( 1 Byte )	0x40	Output Mute
9	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x08	0x00	Channel 1-8 : 0x01-0x08 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Get Output Status
10	0x01	0x20	0x03	0x00 0x15	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x08	0x00	Channel 1-8 : 0x01-0x08 ( 1 Byte )	DC48V : 0x00-Off , 0x01-On ( 1 Byte ) MIC GAIN : 0x00-0x04 ( 1 Byte ) Digital Gain High Byte: 0x00 ( 1 Byte ) Digital Gain Low Byte: 0x00-0x0E ( 1 Byte ) Fader Gain High Byte: 0x00 ( 1 Byte ) Fader Gain Low Byte: 0x00-0x0E ( 1 Byte ) Mute : 0x00-On , 0x01-Off ( 1 Byte ) Phase : 0x00 - Normal 1 , 0x01-Invert ( 1 Byte )	0x40	Receive Output Status
11	0x01	0x20	0x03	0x00 0x11	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x09	0x00	Matrix Output Channel : 0x01-0x10 ( 1 Byte ) Matrix Input Channel : 0x01-0x14 ( 1 Byte )	Routing : 0x00-Off , 0x01-On ( 1 Byte )	0x40	Matrix Mixer
12	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0A	0x00	Matrix Output Channel : 0x01-0x10 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Get Matrix Mixer Status
13	0x01	0x20	0x03	0x00 0x23	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0A	0x00	Matrix Output Channel : 0x01-0x10 ( 1 Byte )	Matrix Local Input 01 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 02 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 03 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 04 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 05 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 06 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 07 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 08 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 09 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 10 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 11 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Local Input 12 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 01 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 02 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 03 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 04 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 05 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 06 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 07 : 0x00-Off , 0x01-On ( 1 Byte ) Matrix Network Input 08 : 0x00-Off , 0x01-On ( 1 Byte )	0x40	Receive Matrix Mixer Status
14	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0B	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Input Gain Up , Step=1dB
15	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0C	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Input Gain Down , Step=1dB
16	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0D	0x00	Channel 1-08 : 0x01-0x08 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Output Gain Up , Step=1dB
17	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0E	0x00	Channel 1-08 : 0x01-0x08 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Output Gain Down , Step=1dB
18	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x0F	0x00	Channel 1-12 : 0x01-0x0C ( 1 Byte )	DC-48V : 0x00-Off , 0x01-On ( 1 Byte )	0x40	Input DC-48V
19	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x10	0x00	Relay 1 / Relay 2 : 0x01 / 0x02 ( 1 Byte )	Relay : 0x00 - 0x0D ( 1 Byte )	0x40	Relay Control
20	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x11	0x00	Invalid : 0x00 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Get Relay Status
21	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x11	0x00	Relay 01 : 0x00 - 0x07 ( 1 Byte )	Relay 02 : 0x00 - 0x0D ( 1 Byte )	0x40	Receive Relay Status
22	0x01	0x20	0x03	0x00 0x1F	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x12	0x00	16 Chars Device Name -ASCII Code ( 16 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Modify Device Name
23	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x13	0x00	Invalid : 0x00 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Get Device information
24	0x01	0x20	0x03	0x00 0x1F	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x13	0x00	16 Chars Device Name -ASCII Code ( 16 Byte )	Firmware Version : 0x10 - 0x99	0x40	Receive Device information
25	0x01	0x20	0x03	0x00 0x10	0x00 0x3A	0x01 ( High Byte of ID address)	0x00 ( Low Byte of ID address)	0xA5 0xE8	0x00 0x14	0x00	Preset number : 0x01 - 0x18 ( 1 Byte )	Invalid : 0x00 ( 1 Byte )	0x40	Recall Preset

Note: RS232 Baudrate=57600  
ID address example: if ID=0x100 then High Byte of ID address=0x01 and Low Byte of ID address=0x00

## Table of Contents

1. Preface	4
2. Main Features	4
3. Front Panel Description	6
4. Rear Panel Description	7
5. Software Editor	8
5.1 System introduction	8
5.2 Help	9
5.3 Scan connection	9
5.4 Input DSP channel	10
5.5 Output DSP channel	12
5.6 Matrix	13
5.7 Ducker	14
5.8 ANC/AGC	15
5.9 FBC	16
5.10 Auto Mixer	17
5.11 Save/Load /Copy	18
5.12 System	19
6. Remote Controller	21
7. Appendix	26
8. Specifications	27

### FCC Part 15 Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

## Preface

Thank you for purchasing the MATRIX A12. This device is dedicated music, paging, discussion and zone management solutions for Commercial Audio applications.

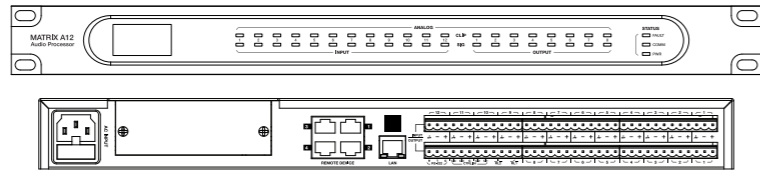

As an Audio Matrix Processor, MATRIX A12 is easy to be used and operated and can offer state-of-the-art signal processing in a cost effective package. Also as digital audio platform for professional use, MATRIX A12 can be used in following electromagnetic environment: residential, commercial and light industrial, urban outdoors. It is the apparatus intended for rack mounting. "Under electromagnetic interference, the SNR may change higher than 3dB."

## Features

### 1. 20 x 16 Digital Matrix

Projects using DSP platforms usually require a minimum number of inputs and outputs. This determines the choice of dedicated matrix models. MATRIX A12 offers a large choice of I/O options in order to cover most of applications:


I/O:

- 12 analogue IN/8 analogue OUT on rear panel ports.
- 8 digital IN / 8 digital OUT via DANTE32S optional card

The basic system features 12 IN x 8 OUT. With the DANTE32S option, it offers 20 IN x 16 OUT. I/O expansion is possible with 16 pcs devices linked together for a maximum of 320 x IN and 256x OUT.

### 2. DSP functions


MATRIX A12 is intended for non-experts. The system uses fixed architecture for quick and easy operation. The intuitive GUI utilizes a familiar hardware-like layout to enable a short programming timeline and rapid hardware implementation.

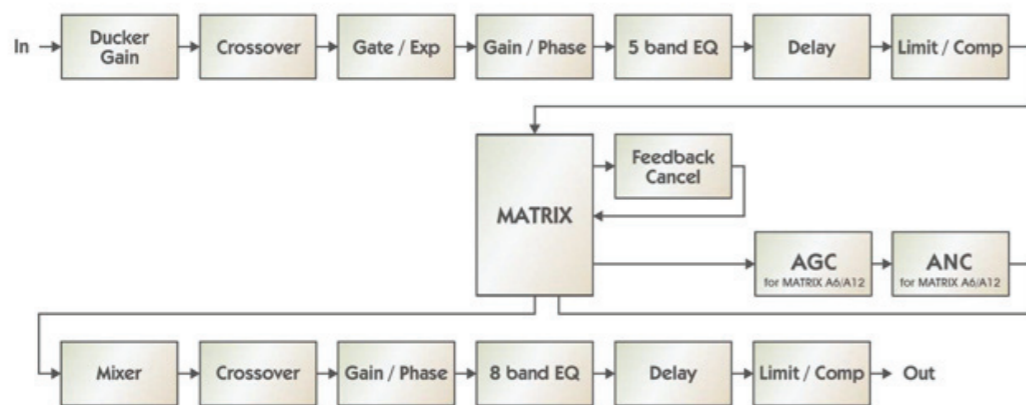

All functionalities can be configured with the PC Editor Software. Settings can be memorized for easy duplication or modification.

## Remote Controller

### RVC-2000 Remote Volume Controller

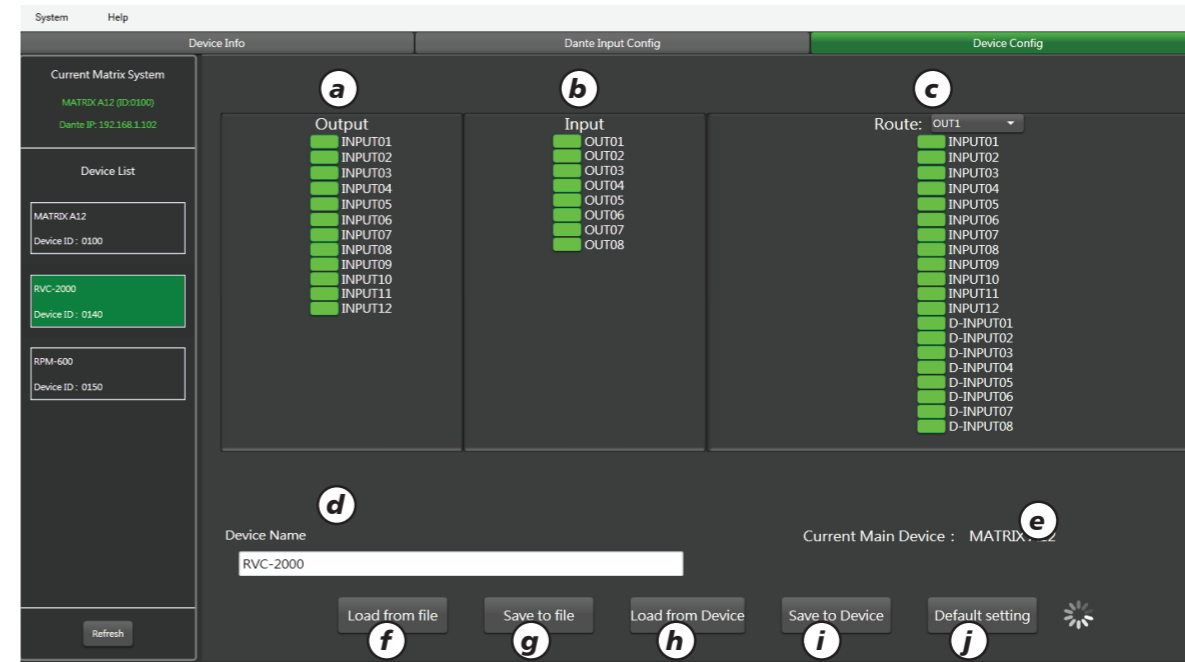

a). **Output:** Total 8 output channels from CH1 to CH8. Green box means available channel, And grey box mean disable channel.

b). **Input:** Total 12 input channels from CH1 to CH12. Green box means available channel, And grey box mean disable channel.

c). **Route:** There are total 20 input sources(IN1-12, D-INPUT01-08) as above images corresponding to each output (output1~8), User can select one or more input sources according to their needs. Green indicator means available channel, And the grey indicator means disable channel.

d). **Device Name:** It can be customized by user.

e). **Current Main Device:** It means the host which is connected to the current device.

f). **Load From File:** Click it to load previous preset files saved.

g). **Save To File:** Click it to save all preset parameters applied on the current interface for the next use.

h). **Load From Device:** Click it to load related configuration parameters from the device.

i). **Save To Device:** Click it to make all preset parameters effective by saving them into the device.

j). **Default Setting:** Click it to restore default settings.

## Remote Controller

### Volume Controller RVC-2000

It can be used to adjust the volume applied on any input/output ports of MATRIX A12 and route any inputs to any input ports. E.g: proceed the operation in the "matrix" menu of PC software applied on MATRIX A12.



#### 1). LCD Display

Related device's information shows on the screen, such as firmware version, ID and function menu and so on.

#### 2). Knob Potentiometer

Press it to enter the menu and then select the menu items by rotating it and finally access the selected function item by pressing down it.

Its interface is the same as the controlling interface of PC software. Details as the description of controlling page of RVC-2000.

#### 3). RD Port

INPUT: Used to connect with host or other devices when only one or multiple RVC-2000 connected to the system separately.

LINK: Used to connect the next device in serial.

Remark: The maximum length of CAT 5e cable is 200 meters.

4). It is necessary to connect with 24V external power via this port when the length of cable is beyond than 200 meters.

## Features


### 3. Networks

MATRIX A12 uses four types of network connections:

- CP/IP for LAN control
  - RD Ports are dedicated to connect the Remote Control Device of Matrix system such as RVC-2000, RPM-600 and power these devices. There are total 4 ports like this built on the host (MATRIX A12) and used to connect with the remote devices. If much more remote devices need to be connected, It is necessary to expand these ports by multiple hosts (MATRIX A12) linked.
  - DANTE32S for multi-channel digital audio transport.
- Cable connections for Remote Controllers (RD ports)  
Use shielded CAT 5e (or better) cable to connect the remote controllers to the RD ports. The maximum transmission distance is 200 meters.


**Attention:** Don't connect a RD Port to the router, or this can damage your devices.

Hooking graphic illustrates:

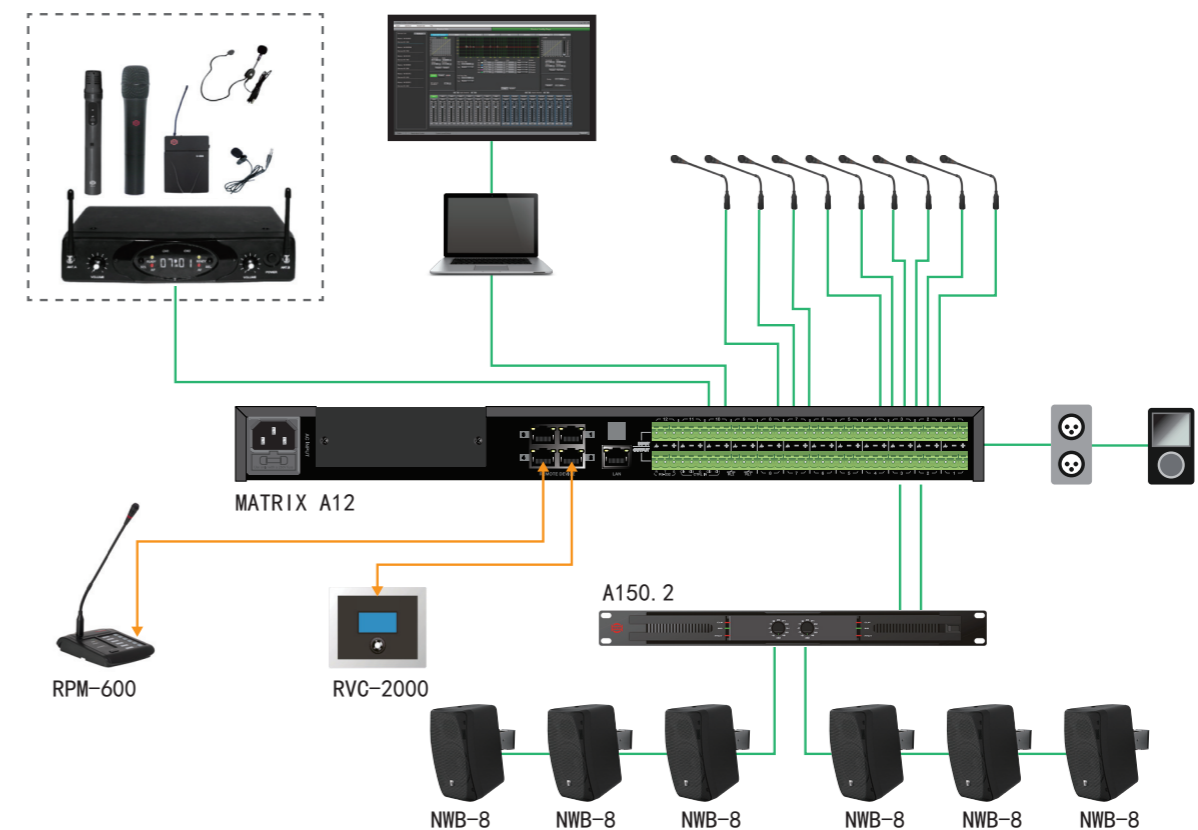




## Front Panel Description

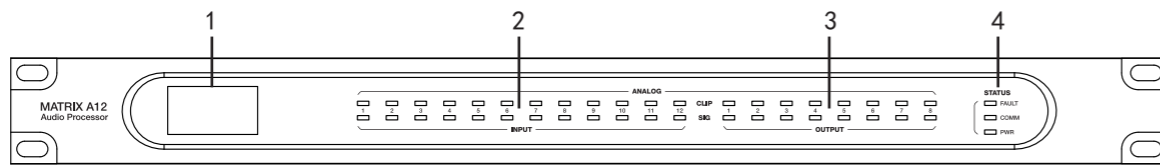

### 1. LCD Display

It displays device information, such as device name, firmware version, ID or communication states.

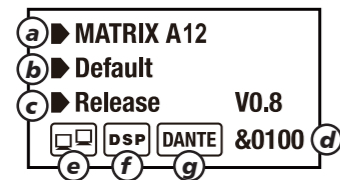

- a). Device name
- b). Current preset
- c). Current firmware version released.
- d). Current ID, The ID can be obtained automatically when the device is connected correctly.
- e). The connection indicator between PC and device. When the connection is normal, both icons in the box will flash alternately.
- f). DSP connection indicator. In case of problem inside unit, "DSP!" icon will appear.
- g). Optional DANTE32S card indicator. The "DANTE32S" icon will appear once the card is available in the rear slot.

**Remark:** The full-lighting screen's brightness will go down by about 10% if none any button operation /Paging activation/GPIO activation/GPIO activation/PC software connection applied on the host or other linked devices during 30 seconds.

### 2. Analog

Analog input indicator. The green lighting indicates the presence of signal. When the input signal clips. The red will light.

### 3. Analog

Analog output indicator. The green lighting indicates the presence of signal. When the output signal clips. the red will light.

### 4. Status

#### • FAULT

The red LED indicates the presence of DSP fault, The "DSP !" icon will appear on the LCD display simultaneously.

#### • COMM

The green LED indicates the normal communication between PC and your device. The green will flash if the Data is being transmitted.

#### • PWR

The blue LED indicates th unit is powered.

## Remote Controller

a). Up to 96 zones can be setup and the maxium number of output ports can be controlled by each zone key is 300 PCS.

b). There are 300 output ports corresponding to each zone key. That if the indicator of corresponding output port lights green means it is selected as output port of this zone.

c). **Key function:** Zone selection and message broadcast.

d). **Message Selection:** It is necessary for the message broadcast as one of key function to be activated. The audio-file range of message selection is from 1 to 32.

e). **Filter function:** All and display the ones selected involved.

f). **Clear All:** To clear all preset or configuraiton applied on the current zones.

g). **Select All:** To select all 300 configuration outputs of the current zones.

h). Device's name can be customized by user.

i). **Priority:** The priority range of system can be customized from 1 to 128 .

j). The volume of voice can be adjusted from -10dB to 0dB.

k). The volume of MIC can be adjusted from -10dB to 0dB.

l). **MIC's key:** It is available to enter two modes ( PPT and LOCK) by pressing the keys. Long-time press for PPT mode and short-time press for LOCK mode.

m). **Default setup:** Press it to set all presets as the default except device name, channel name and device's passwords.

n). **Save project preset:** Press it to save all curent preset parameters into device in order to be used conveniently next time.

**Load project preset:** Press it to save all current preset parameters into device to make them effective.

o). **Load to device:** Press it to import all presets saved on the previous time.

**Load from device:** To get all configuration status applied on the current device.

## Remote Controller

### Zone-selection Expander

The Zone-selection Expander works as a expansion unit for the RPM-600. Up to 8 expansion units can be added, expanding the available function keys to up to 96 per units. Just suggest to add or remove some zone-selection expander under the power-off status in order to avoid any wrong operation.

#### 1). Connection cable(on the bottom)

Port 1: Connected to remote paging microphone or previous zone-selection expander.

#### 2). Connection cable (on the bottom)

Port 2: Connected to the next zone-selection expander.

#### 3). Indication Lable Holder

It is used for marking purposes by writing down the name, purpose of the indicator,etc. or paste a label on the holder directly.


#### 4). Broadcast Zone Indicator

The LED lights to indicate the corresponding broadcasting zone.


#### 5). Zone Selection Indicator

The LED lights to indicate the corresponding selected zone.


#### 6). Selection Key

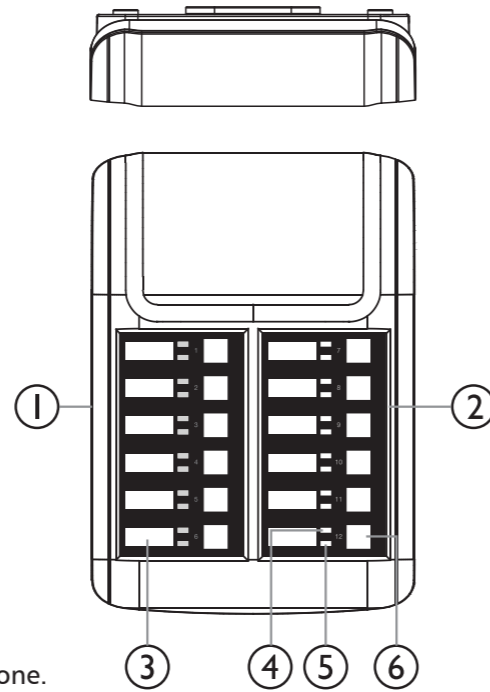

The PC software Configuration Interface applied on RPM-600

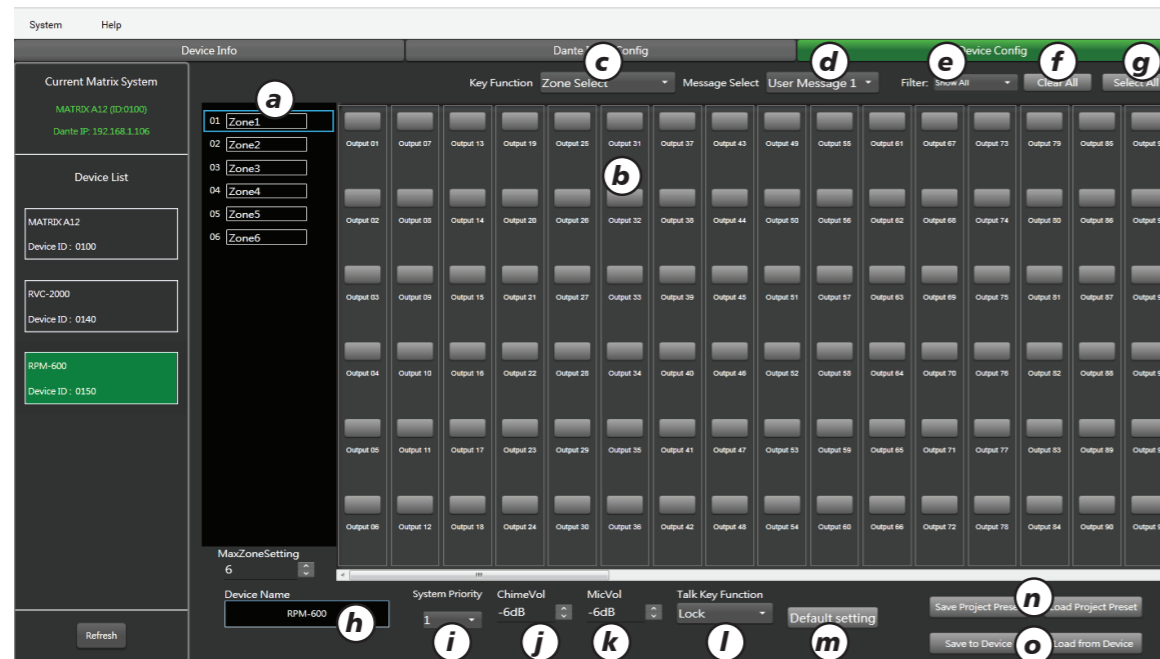

## Rear Panel Description

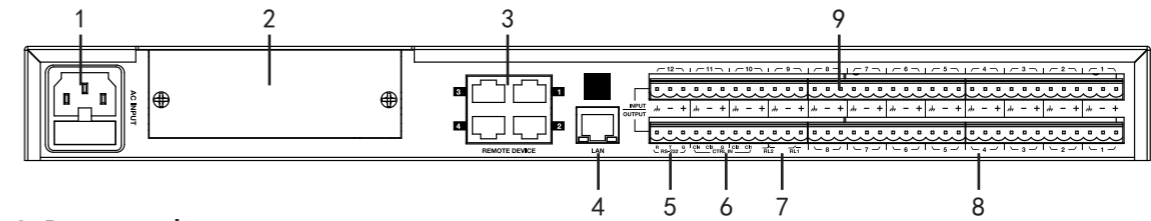

### 1. Power socket

The power socket must be used with a quality cord. In case of failure the cord must be replaced. Do not try to fix it. The supply voltage is between 100V and 240 VAC, 50-60 Hz, depending on different countries or regions.

The socket includes the fuse compartment. When changing it, make sure to replace it with a model of the same characteristics.

### 2. Optional Module Compartment

This location is reserved for the optional DANTE32S card.

### 3. RD port

It can be used to connect with remote controller such as RPM-600, RVC-2000.

### 4. LAN network

The port is used for the Ethernet connection. One of two LED indicators included in the port will light once plugged, the green one indicating the good connection to the network and the yellow one indicating the good data transmission.

- If the yellow lights off, there is a transmission problem; If on, with Green LED off, the device has detected the network, but none connection.

- That the Green lights on means the network connection is correct.

### 5. RS232

The port is used to control the parameters of MATRIX A12 remotely. For example to change preset value or gain value of one channel. Details as the list of control commands in appendix.

### 6. CTRL IN

According to different PC software, The one of 4 corresponding ports to "CTRL IN" will be grounded to trigger. (Details as system configuration interface)

### 7. Control output

Once one port is grounded to trigger, it will output signals. Usually we use it as the switch of third-party equipment.

### 8. Output


8 PCS of balanced analog outputs included in Euroblock connector.

### 9. Input

12 PCS of balanced analog inputs included in Euroblock connector.


**Introduction:**

Once the connection among devices completed, Enter the software controlling interface of MATRIX A12. The initial interface will be shown as below:

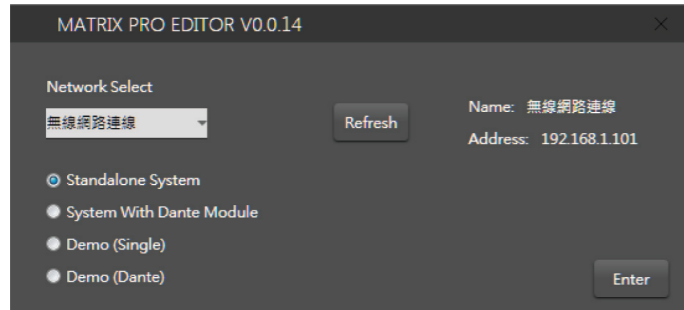

There are total 4 kinds of modes, User can select the mode according to different connection-way among devices. (following application based on standalone mode). Firstly click "refresh" box to refresh current network. Select one mode from 4 kinds of modes. Click "Enter" box to access the software interface.

The software home page as below image:

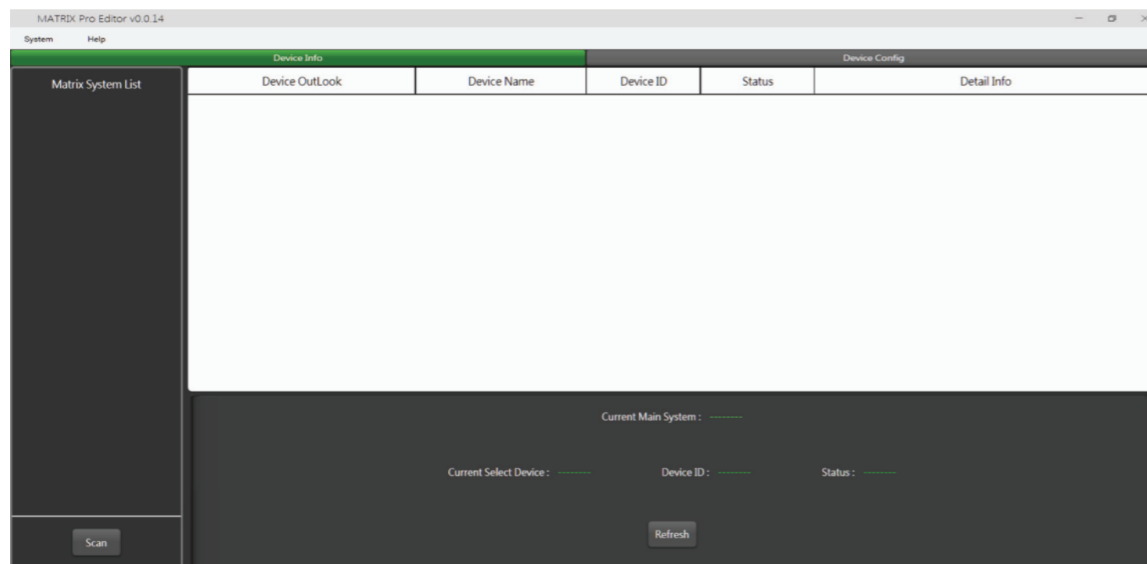**5.1. System introduction****RPM-600**

As one remote paging microphone which can control the zones' numbers up to 96 PCS. Up to 300 output ports can be expanded by each zone. The number of zones is decided by the Q'TY of the host MATRIX A12 linked. Up to 6 PCS of RPM-600 can be used with this system in order to provide the possibility to connect more message zones for convenience.

**1). Indication Lable Holder**

It is used for marking purposes by writing down the name, purpose of the indicator, etc. or paste a label on the holder directly.

**2). Power Indicator**

The green lights when the unit is powered normally.

**3). Communication Failure Indicator**

The yellow will flash when one failure is detected during communicating.

**4). Area control indicator for Broadcasting /General message broadcast**

The green lights once the selection of broadcasting area is completed.  
The red lights when the message broadcast is triggered.  
The function assigned to each key is determined by PC software settings.

**5). Talk Key**

This key is used for the general microphone broadcasting announcement. Press the key after broadcasting area selected and then can broadcast to the selected area.

**6). General Fault Indicator**

The yellow blinking means the system failure happen.  
The solid yellow indicates the failure mutes.

**7). MIC Status Indicator**

The green blinking means the broadcast is suspended.  
The solid green lighting indicates it is broadcasting via microphone.

**8). Emergency Indicator**

The green will flash if the system falls into the emergency mode.

**9). The expander port of zone selection (The bottom)**

The port used to connect both expander and remote microphone.

**10). Power Input Port**

An external-input 15V DC adaptor needs to be added once the distance is more than 200 meters between the last remote paging microphone or emergency microphone and the amplifier host or zone-extending amplifier.

**11). LINK Port**


It is used to connect with the next equipment.

**12). INPUT Port**

The Port is used to connect with the host or the front equipment.


**13). USB Port**

User can update the voice message by the USB port.

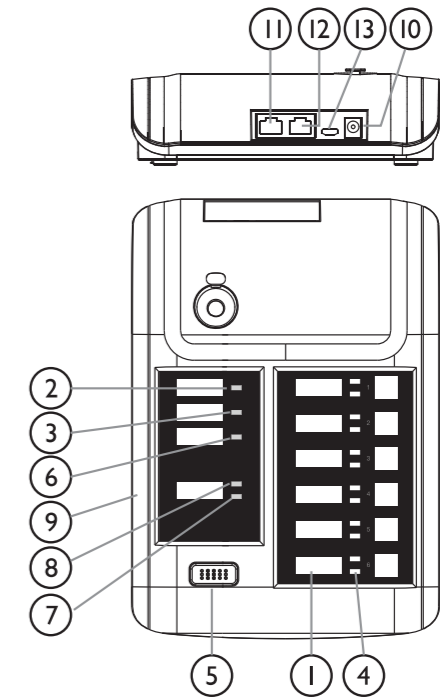



1.4) After "Emergency Priority" selected, below interface will appear:

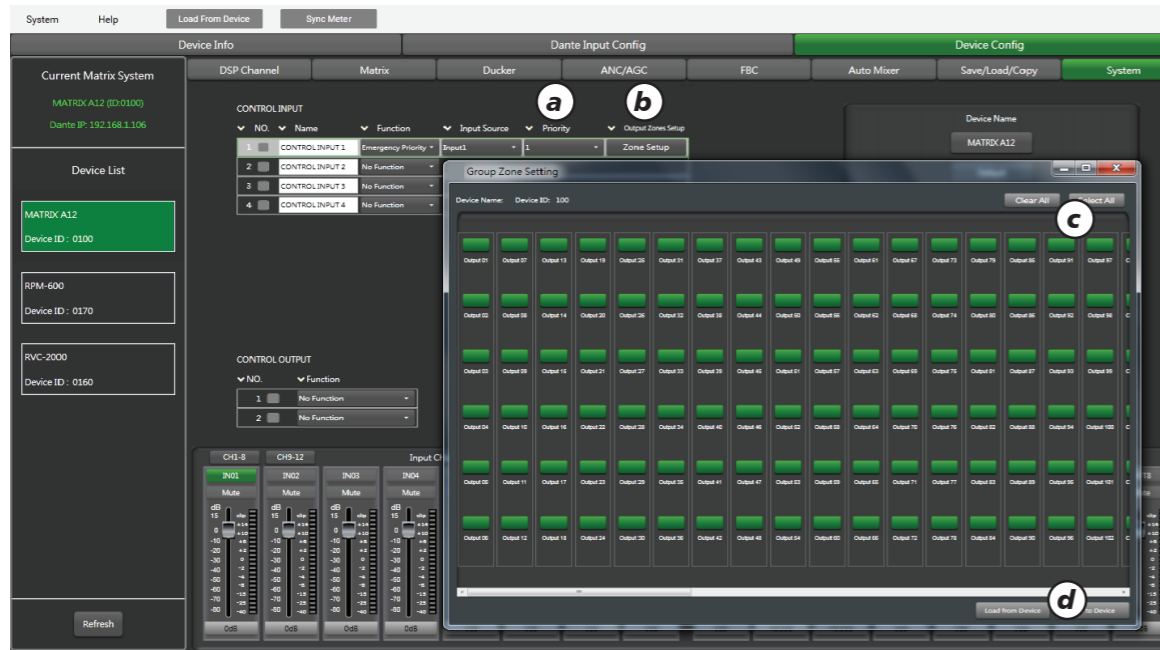

- a). **Priority:** User can set the priority from 1 to 16 and the larger number selected means the higher priority set.
- b). **Output Zone Setup:** User can select the output zones from 1~300 ports according to actual situation. All selected by default, And the box corresponding to the output ports selected will light green.
- c). **Clear All:** Click it to eliminate current output zone setup.  
**Select All:** Click it to select all 300 ports as current output zones.
- d). **Load From Device:** To get current device's configuration status.  
**Save To Device:** Click it to save and make them effect after related settings applied on the output port of the current interface is set.

2). **CONTROL OUTPUT:** There are total 2 external output ports such as control output NO.1 and control output NO.2.  
 Once the output port is triggered successfully, the corresponding box will light green and one shorting signal will output from the port (NO.1~NO.2).

3). **Device Name:** The device name (MATRIX A12) can be customized by user.  
**Default:** Click it to restore factory device name.

4). **Restore Default Setting:** Except device name/channel name/device passwords, others can restore to the default settings.  
**Restore To Factory setting:** Clear all current settings as well as default value involved.

5). **Password setting:** Click it to modify current passwords.  
**Lock system:** Click it to lock the system (remark: super passwords: MA12 ).

6). **Sampling ratio:** 48K and 96K as optional items. The ANC/AGC won't be applied on the system once the 96K selected,

**Load project preset:** Enter it to load local preset files.


**Save project preset:** Enter it to save current preset into software.

**Device ID config:** When multiple devices are used simultaneously, enter it to custom Device ID.

**Mode Select:** Enter it to switch current mode.

**Exit:** Exit current software surface.


## 5.2. Help

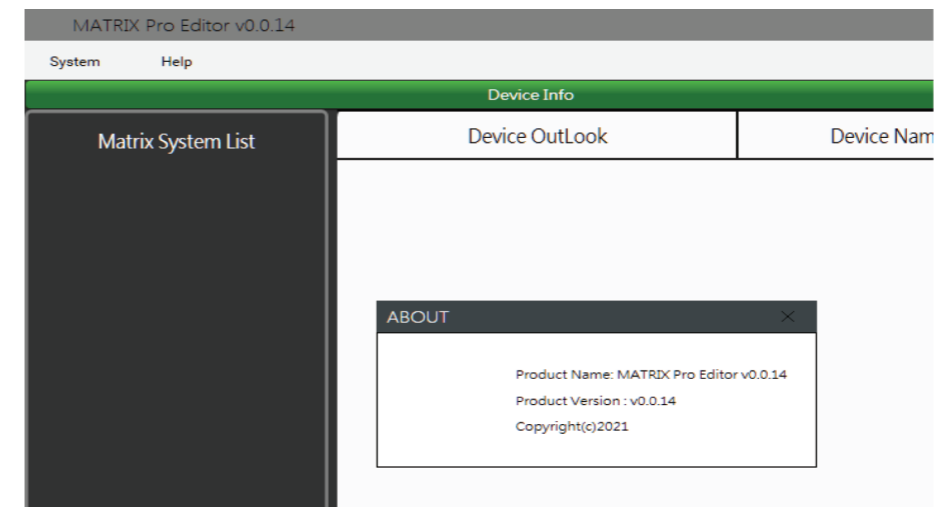

Click "Help" menu to display the name/version/copyright of current software.


## 5.3. Scan connection

Click the "scan" box on the left bottom, All devices connected to current system will be listed on the screen, dual click to select the main system MATRIX A12 to enter configuration interface.

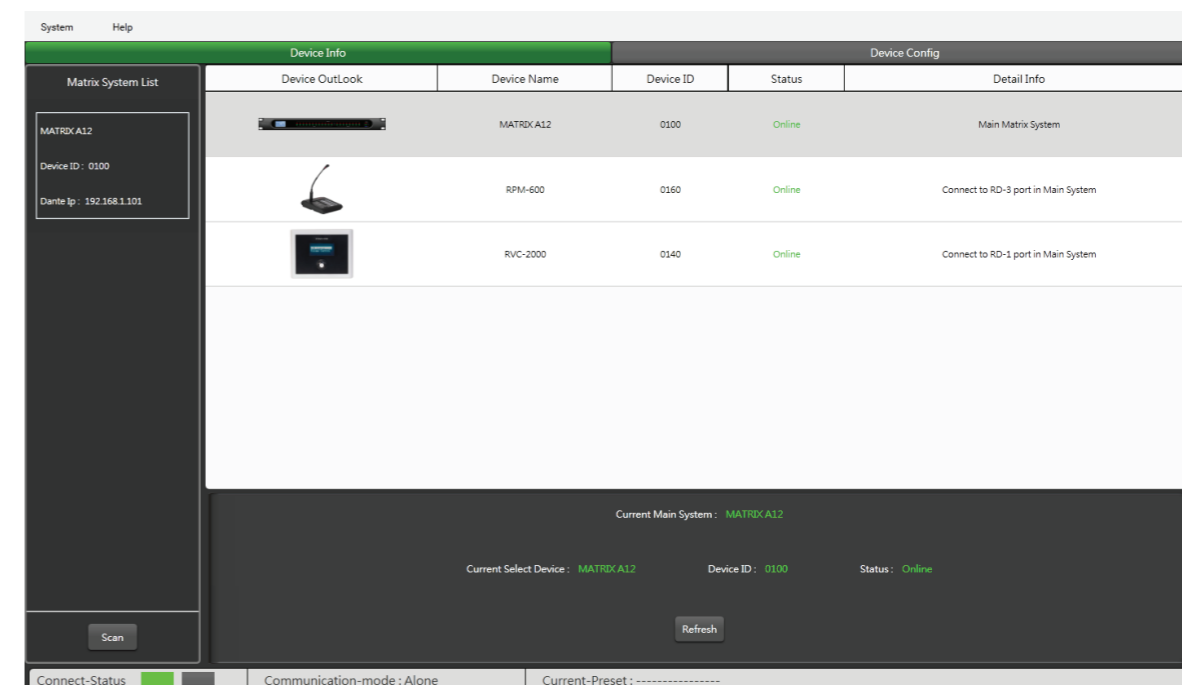

# 5 Software Editor

## 5.4. Configuration interface of DSP input channel

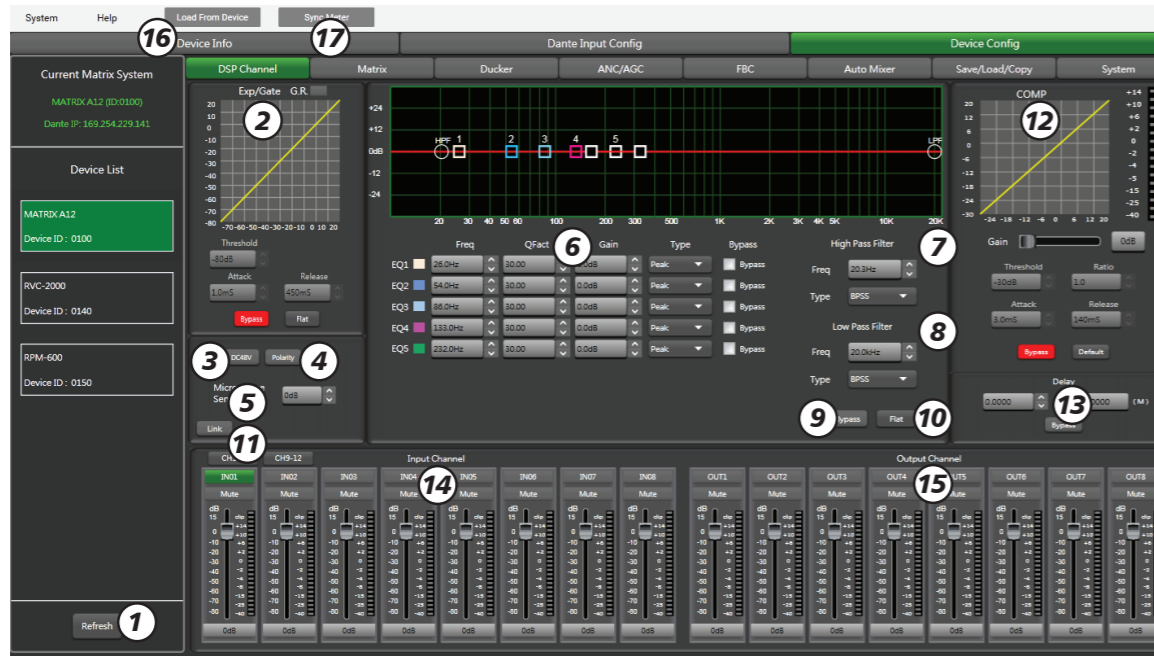

Double click "MATRIX A12" in device list to enter the DSP input-channel configuration interface of PC software.

1). **Refresh:** Refresh the device list.

2). **EXP/Gate:** An Expander is used to add dynamic to a signal. When the signal is below a certain threshold the expander boosts the input signal with a determined ratio. When the signal is beyond the threshold, the output signal remains identical to the input signal. By adjusting the value of the ratio to its maximum, the Expander is transformed into a Noise Gate.

**Threshold:** -80dB to +20dB

**Ratio:** Gain ratio between the input signal and the amplified signal, from 1:1 to 10:1.

**Attack:** Reaction time when the signal is below the specified threshold, from 0 to 250ms

**Release:** Reaction time of the Expander when the signal passes beyond the specified threshold from 5ms to 2000ms.

**Bypass:** Press this button, the function of this area is invalid.

**Default:** Restore this area to default settings.

3). **DC48V:** 48V phantom power for electric microphone. Note that this button is only used for external condenser microphone, otherwise it may damage your device.

4). **Polarity:** inverts the phase of the signal by 180°.

5). **Microphone Sensitivity:** Input sensitivity for a microphone, from -48dB to 0dB.

# 5


## Software Editor

### 5.12. System configuration interface



1). **CONTROL INPUT:** There are total 4 external trigger ports from controinput1 to controinput 4. Once trigger command received sucessfully, The corresponding box of NO.1~NO.4 will light, It means the preset functions take effects on the corresponding trigger port .


- **Name:** the name of trigger port can be customized by user.
- **Function:** Click the drop-down arrow to have 4 optional function items as below details:
  - 1.1) No Function
  - 1.2) Mute All Outputs
  - 1.3) Input Priority,Below interface will appear if it selected.

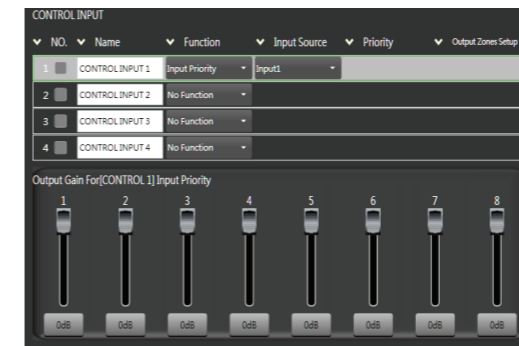

a) **Input Source:** Click the drop-down arrow to select input source from None, Input1-12, D-Input 1-8.

b) **Output Gain:** The output gain of CH1~8 corresponds to input priority of CONTROL 1~4. (i.e. the grounded device's port of the CTRL IN corresponds to trigger port 1~4).

## 5.11. Save/Load/Copy configuration interface

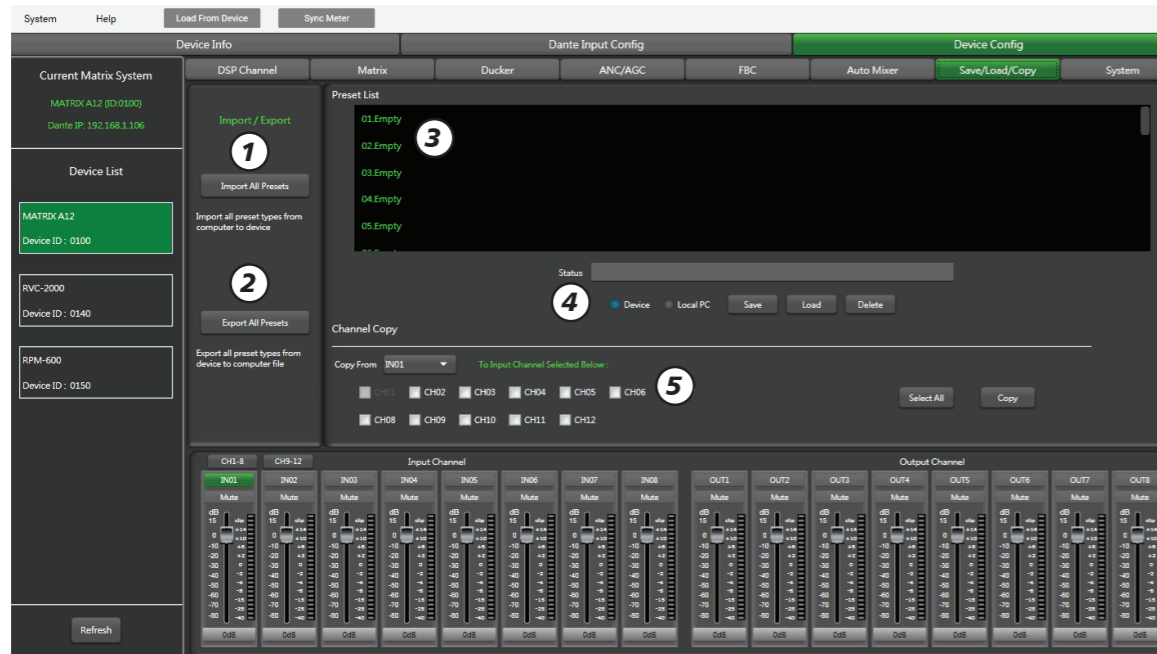

This menu is used to manage the backup parameters. These data can be stored directly in the internal memory of host as a preset. Its memory contains a total of 24 presets.

- 1). **Import All Preset:** Import all preset types from device to computer file.
- 2). **Export All Preset:** Export all preset types from computer to device.
- 3). **Preset List:** The preset list shows all saved presets(total 24 presets). The status below shows the current operating status.
- 4). **Device/PC**
  - Save: Select the preset you want to save, choose to save to local or device, and then click "Save" box.
  - Load: You can choose to load parameters from the machine / PC.
  - Delete: Click this button to delete the selected parameter in the software list.
- 5). **Channel Copy**
  - Any channel from input channels(CH01-CH12) or output channels(CH01-CH08) can be selected and copied to any other channel in the check box.(DSP settings, Gain,Mute).
  - Select All: Click this button, all corresponding input/output channels will be selected.
  - Copy: After selecting the input / output channel to any other channel, click Copy, and the parameter copy is successful.

## 6). Parametric EQ Setting

The equalizer is used to compensate or alter the spectral characteristics of the signal in order to obtain the flattest possible frequency response. The module here is a parametric 5 bands EQ.

**Freq:** central frequency of the filter between 20Hz and 20kHz.

**Fact:** selectivity of the filter(Q). Greater is the value, thinner is the processed part of the spectrum. Can be adjusted from 0.30 to 30.

**Gain:** Gain or attenuation of the center frequency, from -15dB to +15dB.

**Type:** Filter type, Peak/Low/High.

**Bypass1~5:** temporarily cancels the individual processing of filters 1~5 without having to use the general 'Bypass'.

7). **EQ: High Pass Filter:** Those filters are used to eliminate non necessary frequencies above and below the signal spectrum, in order to avoid any background noise generation due to multi-processing. For instance, a voice microphone will be set to 100HZ.

**Freq:** Cut-off frequency.

**Type:** Filter type (total optional 21 types).

8). **EQ: Low Pass Filter:** Those filters are used to eliminate non necessary frequencies above and below the signal spectrum, in order to avoid any background noise generation due to multi-processing. For instance, a voice microphone will be set to 4kHz for the low Pass.

**Freq:** Cut-off frequency.

**Type:** Filter type (total optional 21 types).

**Note:** The pass filter can be set manually by enter alpha or numeric values, or directly clicking on the frequency-response graph, keeping moving the mouse symbol while holding down the button to make it real.

9). **Bypass:** the signal is not processed and skips to the next processing module.

10). **Flat:** all parameters are reset to the factory settings.

11). **LINK:** After it enables, based on current channel to link with the other channel. Finally related functionalities of both channels will be linked together such as fader, phase,mute,delay and so on.

12). **COMP:** a compressor can limit the dynamics of a signal beyond a certain level. When the signal exceeds the Threshold it is compressed in a ratio greater than 1. Below the Threshold, input and output signals remain the same. By adjusting the ratio to its maximum value, the compressor is transformed into a limiter.

**Threshold:** threshold from which the signal is compressed, from -30dB to +20dB

**Ratio:** Compression ratio. For instance, a 4:1 ratio means that the input level is 4dB above the threshold, the output signal will be 1dB above this threshold. The ratio value can be set from 10:1 to 1:1.

**Attack:** Reaction time of the compressor when the signal is beyond the specified threshold. From 10 to 250ms.

**Release:** reaction time of the Compressor when the signal is below the specified threshold, from 5ms to 2000ms.

**Bypass:** Press this button, this area function is invalid.

**Default:** Restore COMP parameters to default.

13). **Delay:** 1361.2916ms as the maximum delay time can be set to each channel. It can be used on the simultaneous application of audio/video or phase adjustment.


**Bypass:** The signal is not processed and skips to the next processing module.

14). **Input channel 1-12 adjustment:** To adjust the gain value, mute or custom channel name applied on corresponding channel.

15). **Output channel 1-8 adjustment:** To adjust the gain value, mute or custom channel name applied on corresponding channel.

16). **Load from Device:** Loading related information from device and to be used for sync device settings.

17). **Sync meter:** Click it to achieve synchronization under the DANTE32S mode.

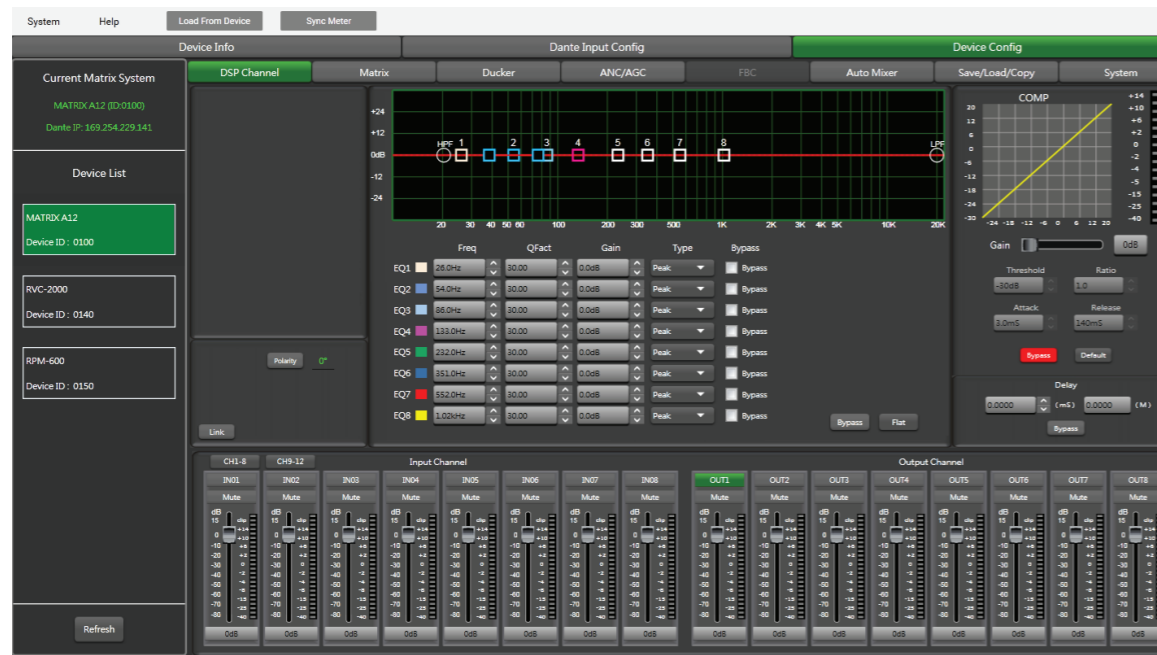

**Note:** Except "Expander/Gate" part, the same menu as DSP input channel's applied. The EQ parameters here is equipped with 8 bands, Details as introduction of DSP input channel.

### 5.10. Auto Mixer configuration interface



The Auto mixer automatically reduces the level of a microphone when it is not being used. Consequently it lowers the rumble, reverberation and other extraneous noise that occur when several microphones operate simultaneously.

It is typically used to mix panel discussions on television talk shows and at conferences and seminars.

It can also be used to mix actors wireless microphones in theater productions and musicals. It is frequently employed in settings where it is expected that a live sound operator will be not present, such as courtrooms and city council chambers.

This function is often used in conjunction with the microphone priority of the Ducker.

1). **Local Input:** selection of input channels(1-12) to be processed.

2). **Network Input:** selection of the DANTE32S input channels(1-8) to be processed.

3). **Active Time:** Set the start mixing time(10ms-6000ms)of the signal of the selected input channel.

4). **Auto Mixer OFF/ON:** To enable /disable the auto mixing function.

**Clear All:** Used to close all input channels.



## 5.9. FBC configuration interface

The screenshot displays the FBC configuration interface. At the top, there are tabs for 'Device Info', 'Dante Input Config', and 'Device Config'. The 'FBC' tab is selected. On the left, there's a 'Device List' showing 'MATRIX A12 (D-0100)'. The main area features a frequency response graph with a red line indicating the FBC sensitivity. Below the graph, there are controls for 'FBC Sensitivity' (set to -70dB), 'FBC Speed' (set to Fast), and 'Notch Filters' (6 bands). At the bottom, there are input and output channel sliders for channels IN01-08 and OUT1-08.

**FBC(Feedback Canceller)** is a function which eliminates feedback automatically. Feedback occurs unexpectedly in a system where there are microphones and speakers nearby one of the other. This loop effect is an electro-acoustic resonance which generates an unpleasant frequency noise. The FBC automatically detects the frequencies involved and attenuates them almost instantly using a series of selective filters.

1). **FBC Sensitivity:** The sensitivity range adjusted from -50 dB to -70 dB; To select the slow release speed or fast under the FBC Speed.

2). **Notch Filters:** Use it to deal with the noise of 6 bands within 20Hz-20KHz frequency range and make recording of related datas and display more intuition and image in the form of graphics and curves.

**Clear:** Used to initialize all the dynamic and all static filters.

**OFF/ON:** Used to disable or enable FBC function.

## 5.6. Matrix configuration interface

The screenshot displays the Matrix configuration interface. At the top, there are tabs for 'Device Info', 'Dante Input Config', and 'Device Config'. The 'Matrix' tab is selected. On the left, there's a 'Device List' showing 'MATRIX A12 (D-0100)'. The main area features a matrix of input and output channels. The bottom section shows input and output channel sliders for channels IN01-08 and OUT1-08.


This part of the software is used to route inputs through a graphical representation as a matrix. By clicking on the gray boxes several inputs can be assigned to several outputs. If the connection is active the box turns green, otherwise it remains gray. And the volume is adjustable. The matrix can route 20 input signals to 16 separate outputs. One talks about a 20 x 16 matrix.

The DANTE32S digital I/O means from D-01 to D-08 which only can be selected when the optional DANTE card is used.



# 5 Software Editor

## 5.7. Ducker configuration interface

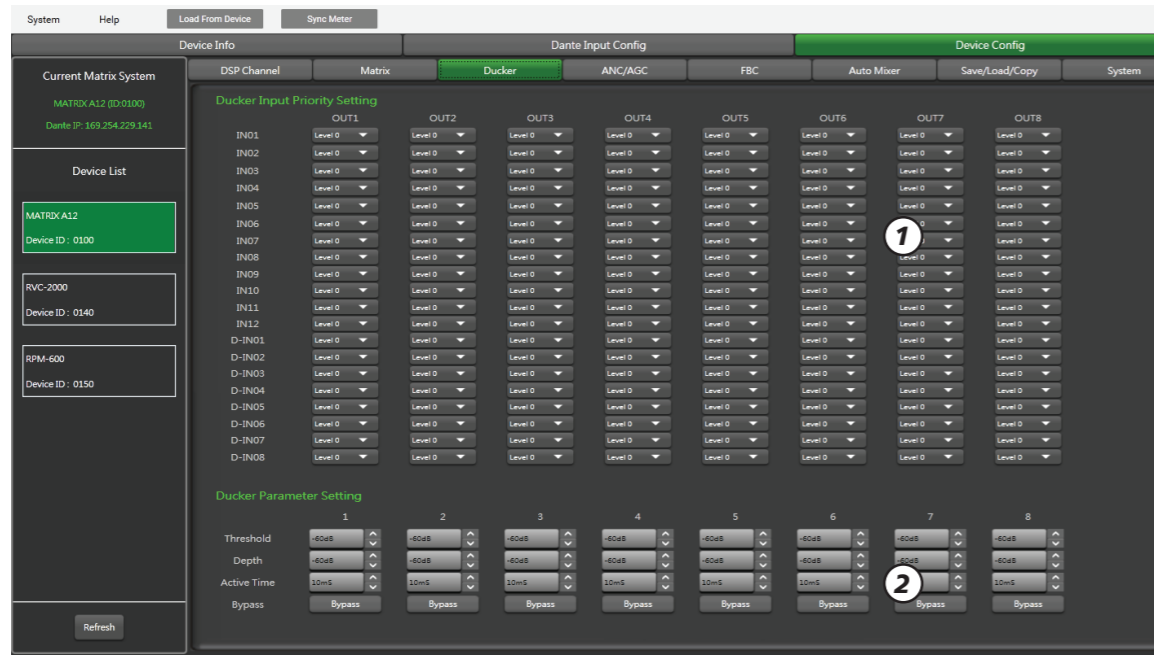

The principle of the Ducker is to attenuate one or several channels when priority signals are activated. The main applications are automatic speech for conference or priority messages. E.g. Use the host microphone signal to control the background music volume. The host automatically reduces the background music volume when speaking. After the speech, the volume is automatically restored.

### 1). Ducker Input Priority Setting

Each input corresponds to each output. This area is used to set the priority of input audio 0-15.

### 2). Ducker Parameter Setting

**Threshold:** threshold of attenuation, From 20dB to -60dB.


**Depth:** depth of attenuation, From 0dB to -60dB.

**Active Time:** Velocity of gain change to attenuate inputs.

**Bypass:** Transition time between the attenuated level and return to the normal level.

# 5 Software Editor

## 5.8. ANC/AGC configuration interface

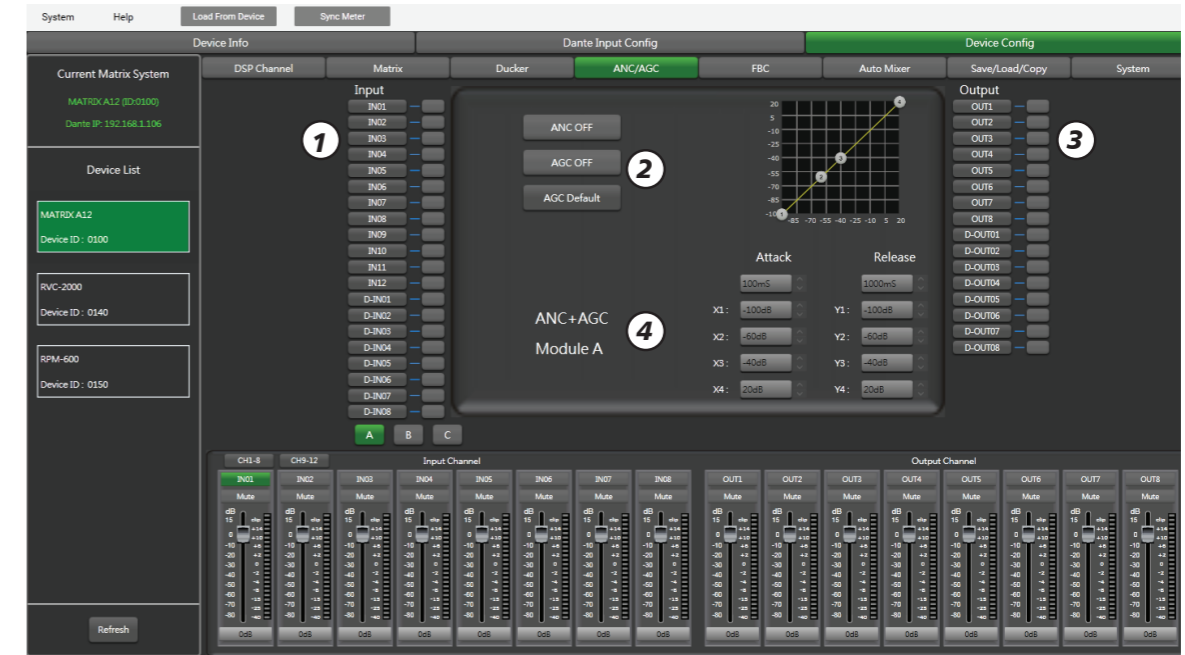

**ANC:** Proceeding auto elimination of noise. It can be used to eliminate it once the background noise happen in use.

**AGC:** Proceeding auto control of gain. It can be used to control the gain based on the four point curve value as above images. Once the HF/LF frequency value isn't inconstant with the set value it will be increased or compressed into the limits automatically.

1). **Input:** Here 12 input channels can be selected (CH1~CH12), Grey box means closed channel and green box means the channel opened.

2). **ANC OFF:** The box lights green when it is enable to control the noise automatically.  
**AGC OFF:** The box lights green when it is enable to control the gain automatically.  
**AGC Default:** It will control the gain automatically based on the default preset parameters.

3). **Output:** Here 8 output channels can be selected (CH1~CH8), Grey box means closed channel and green box means the channel opened.

### 4). ANC+AGC Module A/B/C

(A/B/C represent three different groups, The corresponding function here will enable once AGC function is enabled.)

**Attack:** Reaction time when the signal is below the specified threshold, from 0 to 250ms.

**Release:** Reaction time of the Expander when the signal passes beyond the specified threshold from 5ms to 2000ms.

**X1/2/3/4:** Used to proceed gain adjustment based on -85dB~20dB of gain range.

**Y1/2/3/4:** Used to proceed gain adjustment based on -100dB~20dB of gain range.

**Remark:** The filter can be set by key-in figures directly or adjusting the 4 frequencies in graphics.